


Superstop waterstop,  
install 2" in from outer face of wall

Paraseal LG below floor and footing  
(See Below Slab-on-Grade Section)

24" Strip of Paraseal LG  
placed inside formwork  
HDPE side facing installer

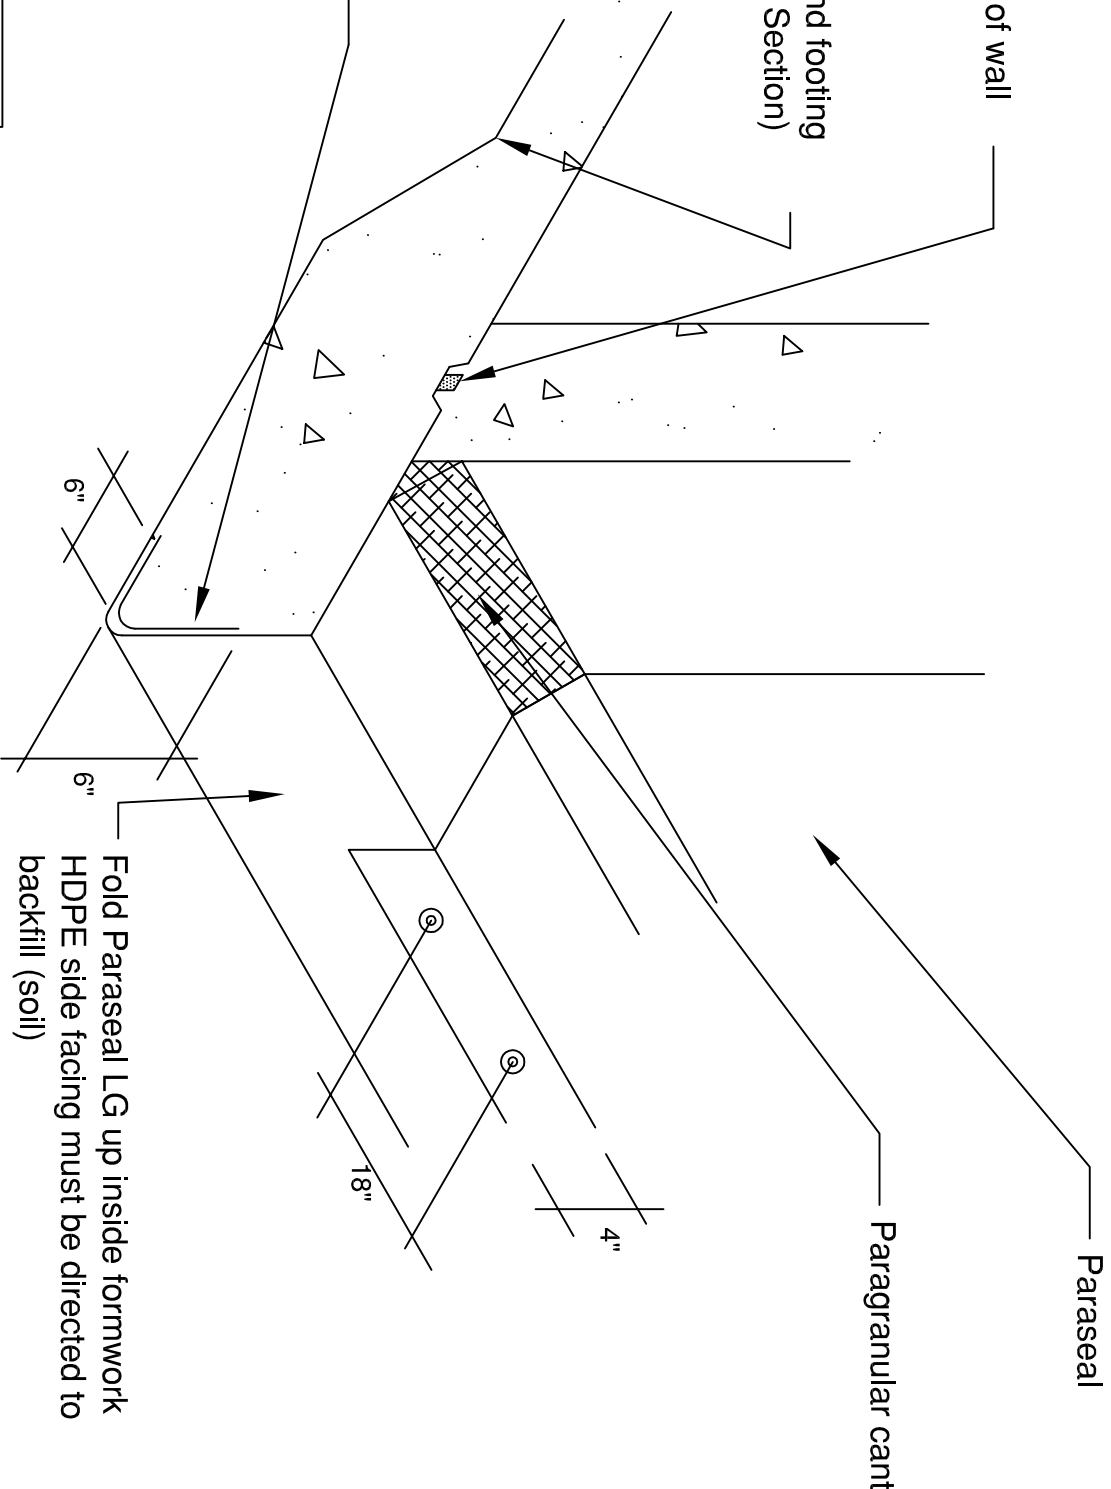

Fold Paraseal LG up inside formwork  
HDPE side facing must be directed to  
backfill (soil)

**Note:** Paraseal products require a  
minimum 24 psf compaction/  
confinement to be effective.

This detail is intended for conceptual purposes only. Detail must be reviewed by a project/design professional.  
See [www.tremcosealants.com](http://www.tremcosealants.com) for the most up-to-date product information.

Rev	Date	Description	By
1	10/10/2013	Update Detail	KAB

**TREMCO**  
[www.tremcosealants.com](http://www.tremcosealants.com)  
3735 Green Road \* Beachwood, OH 44122  
Phone : 866-209-2404 \* Fax: 216-766-5535

Project: Backfilled Walls  
Detail: Tie-In Between Below Floor Paraseal and Wall Paraseal

Sheet Number:  
Date: 7/31/2009

File Name:  
10833

Rev #  
1

Drawn by: KT      Checked by: WH      Scale: None