


Remove at least 6" of existing waterproofing and clean surface thoroughly to receive Paraseal

Paraseal membrane with HDPE side facing installer

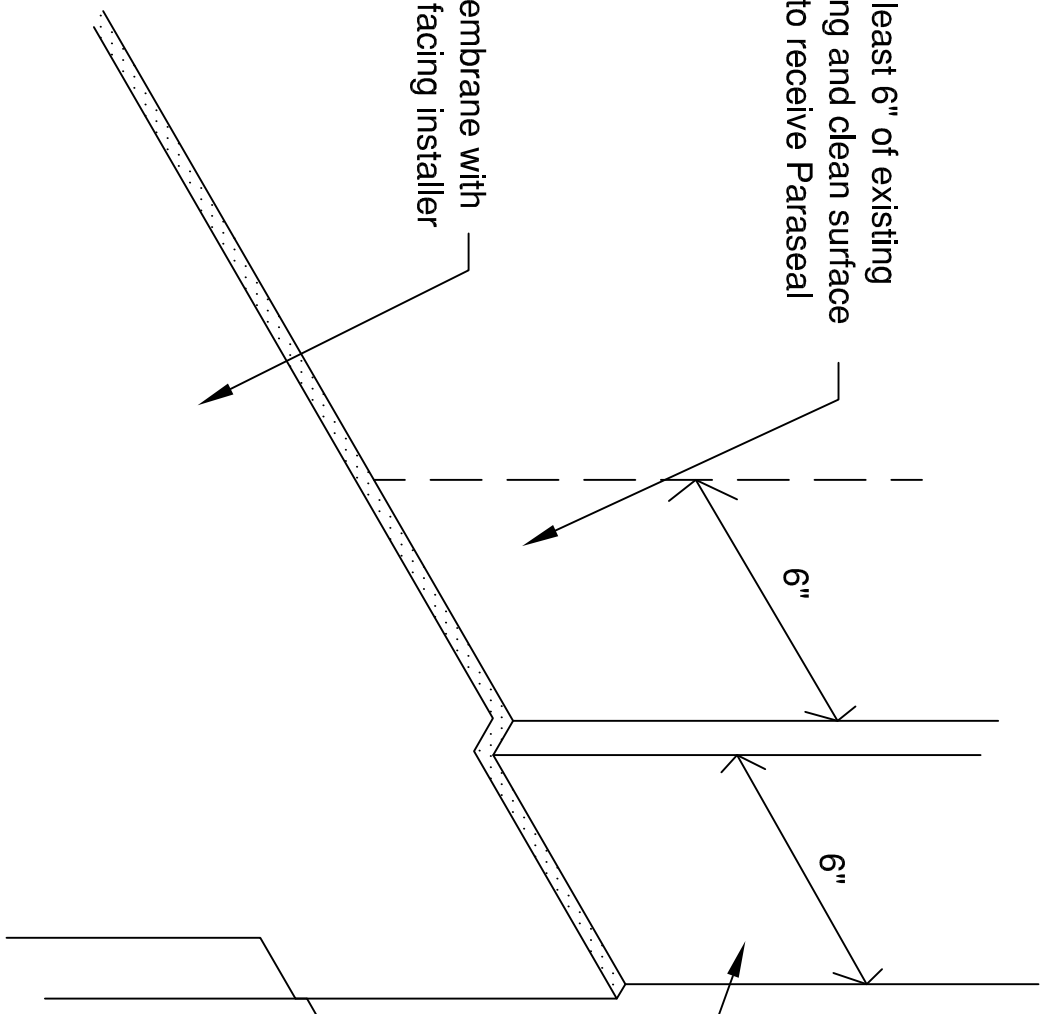


Existing waterproofing scheduled to remain

Permanent Seam Tape at all vertical terminations and seams (confirm compatibility prior to application)

Note: Paraseal products require a minimum 24 psf compaction/ confinement to be effective.

This detail is intended for conceptual purposes only. Detail must be reviewed by a project/design professional. See www.tremcosealants.com for the most up-to-date product information.

Rev	Date	Description	By
1	10/10/2013	Update Detail	KAB

 www.tremcosealants.com 3735 Green Road * Beachwood, OH 44122 Phone : 866-209-2404 * Fax: 216-766-5535	Project: Backfilled Walls Detail: Tie-In of Paraseal to Other Existing Waterproofing		Sheet Number: 	File Name: 10835	Rev # 1
	Drawn by: KT	Checked by: WH	Scale: None	Date: 7/31/2009	