


2" Paragrangular cant under Paraseal where wall meets footing

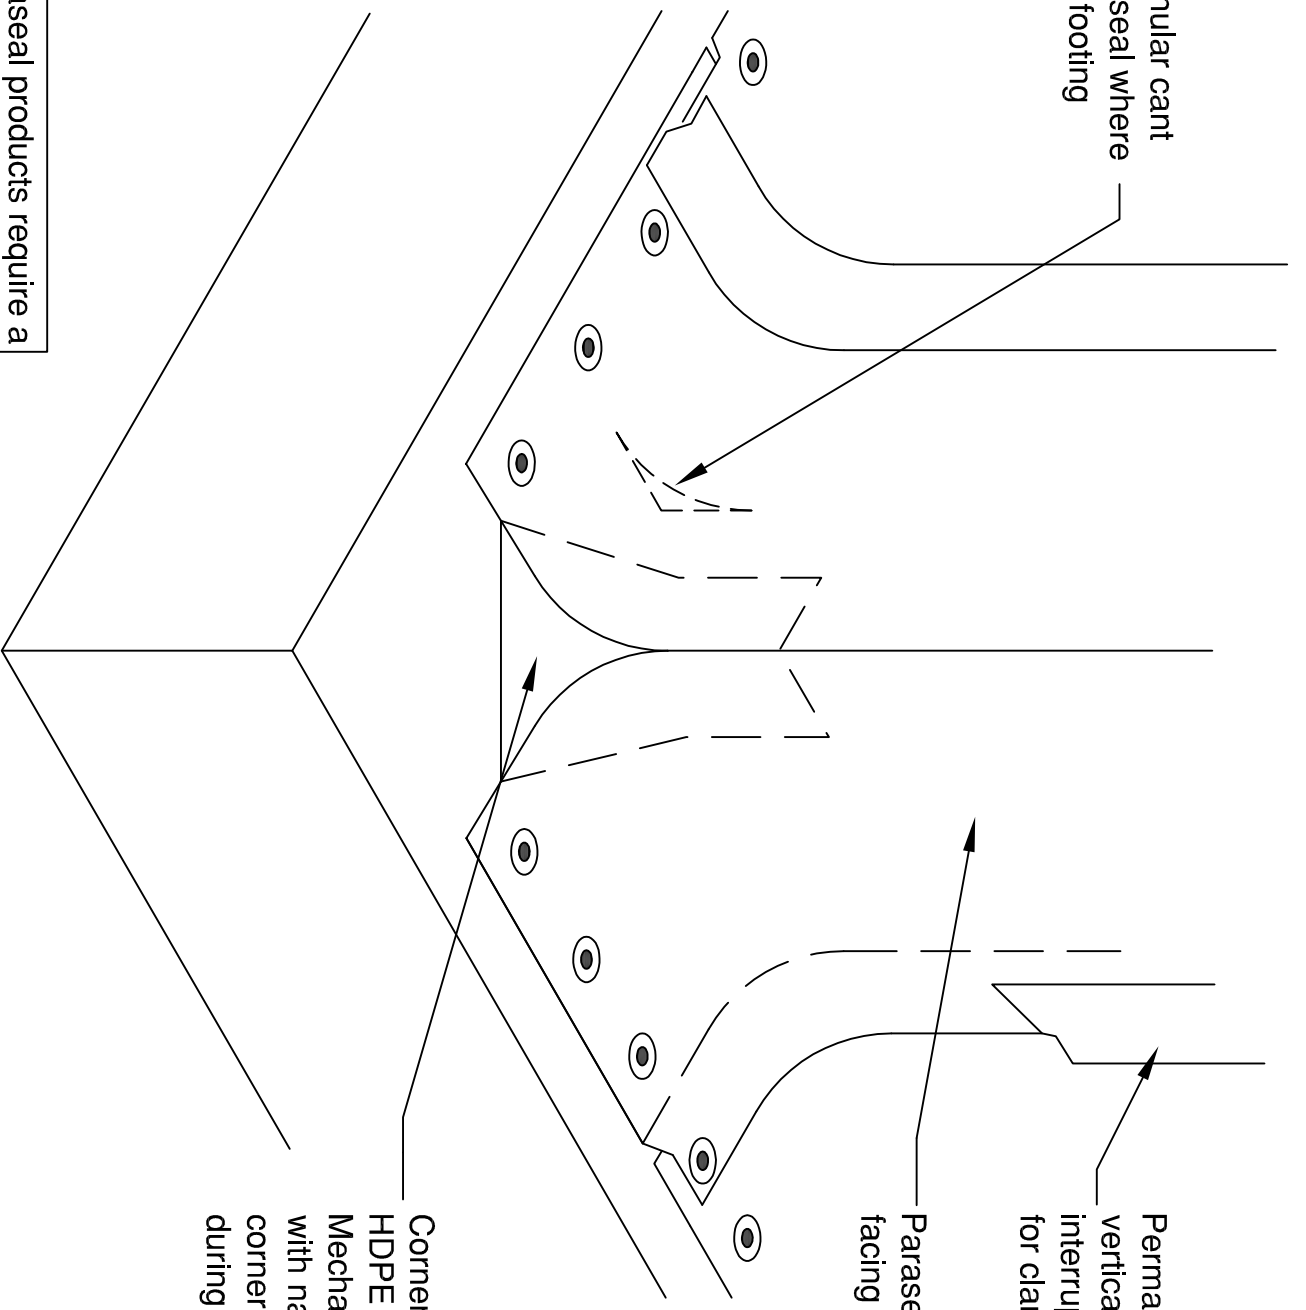

Permanent Seam Tape at all vertical seams (Tape interrupted in illustration for clarity)

Paraseal membrane with HDPE facing installer

Corner piece of Paraseal with HDPE facing installer. Mechanically fasten to substrate with nails every 2" to ensure corner piece does not move during backfill process.

Note: Paraseal products require a minimum 24 psf compaction/ confinement to be effective.

This detail is intended for conceptual purposes only. Detail must be reviewed by a project/design professional. See www.tremcosealants.com for the most up-to-date product information.

Rev	Date	Description	By
1	10/10/2013	Update Detail	KAB



www.tremcosealants.com
 3735 Green Road * Beachwood, OH 44122
 Phone : 866-209-2404 * Fax: 216-766-5535

Project: Backfilled Walls
 Detail: Typical Outside Corner

Drawn by: KT

Checked by: WH

Scale: None

Sheet Number:

Date: 7/31/2009

File Name:
 10839

Rev #
 1