

Permanent Seam Tape at all vertical seams (tape interrupted in illustration for clarity)


Paraseal membrane with HDPE facing installer

Corner nails should be within 3" of corner and staggered

1" Continuous vertical cant of TREMproof 250 GC T, or Paraseal in corner under Paraseal  
 2" Paragrannular cant under Paraseal where wall meets footing

Note: Paraseal products require a minimum 24 psf compaction/ confinement to be effective.

This detail is intended for conceptual purposes only. Detail must be reviewed by a project/design professional. See www.tremcosealants.com for the most up-to-date product information.

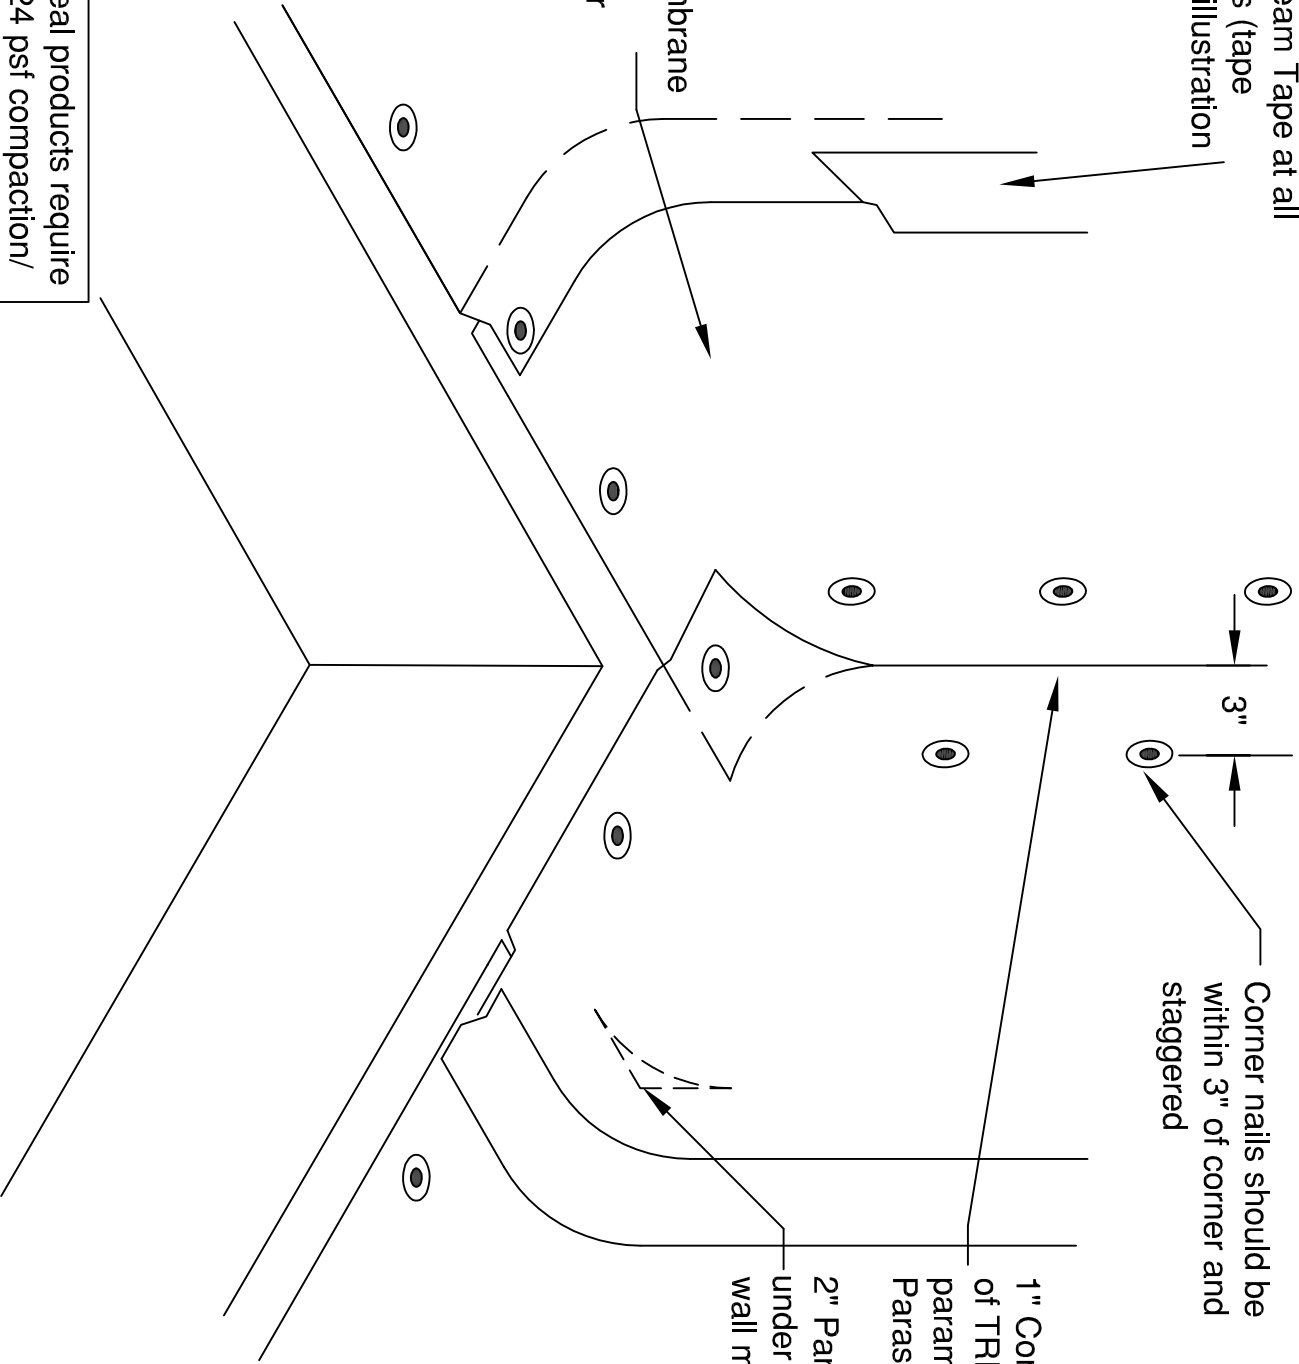

Rev	Date	Description	By
1	10/10/2013	Update Detail	KAB

**TREMCO.**  
 www.tremcosealants.com  
 3735 Green Road \* Beachwood, OH 44122  
 Phone : 866-209-2404 \* Fax: 216-766-5535

Project: Backfilled Walls  
 Detail: Typical Inside Corner

Drawn by: KT      Checked by: WH

Sheet Number:  
 Date: 7/31/2009

File Name:  
 10840

Rev #  
 1