

Hardware Source:

Industrial Bolt and Supply
4041 Transport Street
Ventura, CA 93003
805-644-4243

Required Assembly:

- 1- 3/8" x 5" Stainless steel hanger bolt
- 2- 3/8" Stainless steel nuts
- 2- 3/8" x 1 1/2" Stainless steel fender washers
- 2- 1/4" x 1 1/2" Neoprene washers

Optional:


- 1- 3/8" x 1 3/4" Rod coupler
- 1- 3/8" DIA All thread rod

NOTE:

1. The waterproofing applicator would punch a 3/4" diameter or less hole in the Paraseal GM/LG membrane and slip the Paraseal GM/LG over the pre-installed Stud with stainless steel nut, washer and neoprene washer.
2. The waterproofing applicator would install the neoprene washer, stainless steel washer and nut followed by the Vulkem 116 sealant.

Paraseal GM/LG membrane

TREMDrain 1000 or Tremco Protection Mat

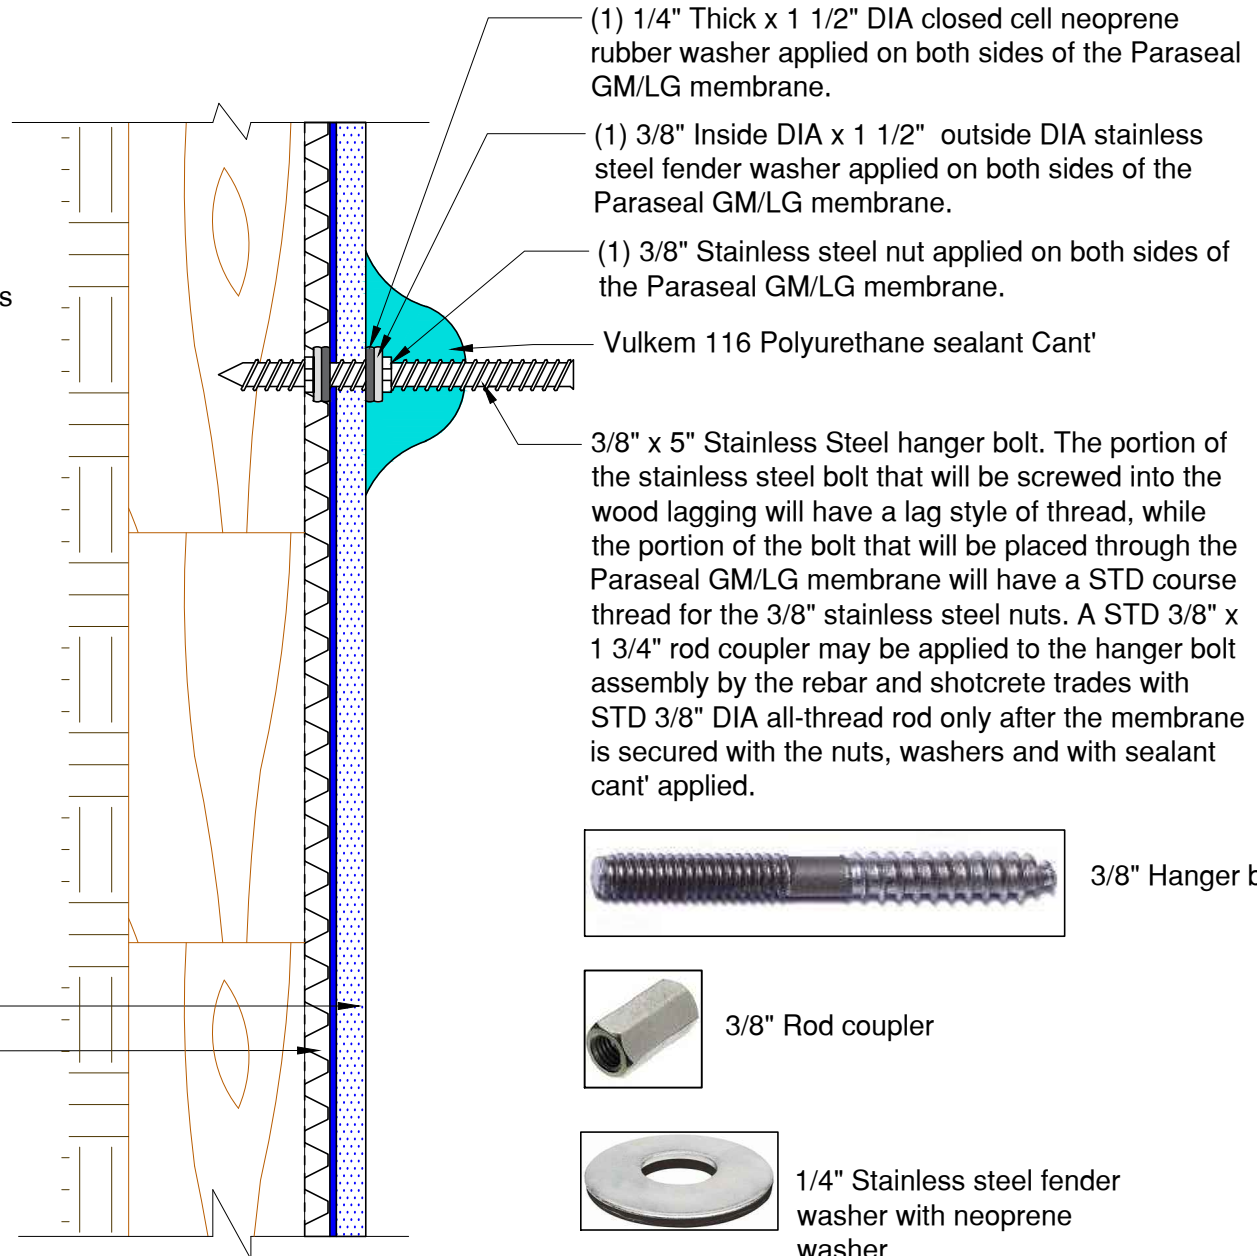

3/8" Hanger bolt



3/8" Rod coupler



1/4" Stainless steel fender washer with neoprene washer

NOTE: Paraseal products require a min of 24 PSF of compaction/confinement in order to function as designed.

TREMCO

www.tremcosealants.com

3735 Green Road * Beachwood, OH 44122
Phone : 866-209-2404 * Fax: 216-766-5535

Detail: HANGER BOLT PLACED IN LAGGING PRIOR TO MEMBRANE APPLICATION

This detail is intended for conceptual purposes only.

Drawn by: MI

Checked by: JM

Scale: None

Sheet Number:

Date: 8/20/2015

File Name:

BSW-16-GM20

Rev #

00