

Nylon Zip Tie or S.S. Clamp


Dymonic 100

Tremco Protection Course

Tremco PUMA Primer

Tremco PUMA Flashing

TREMDrain Drainage Mat,
as specified

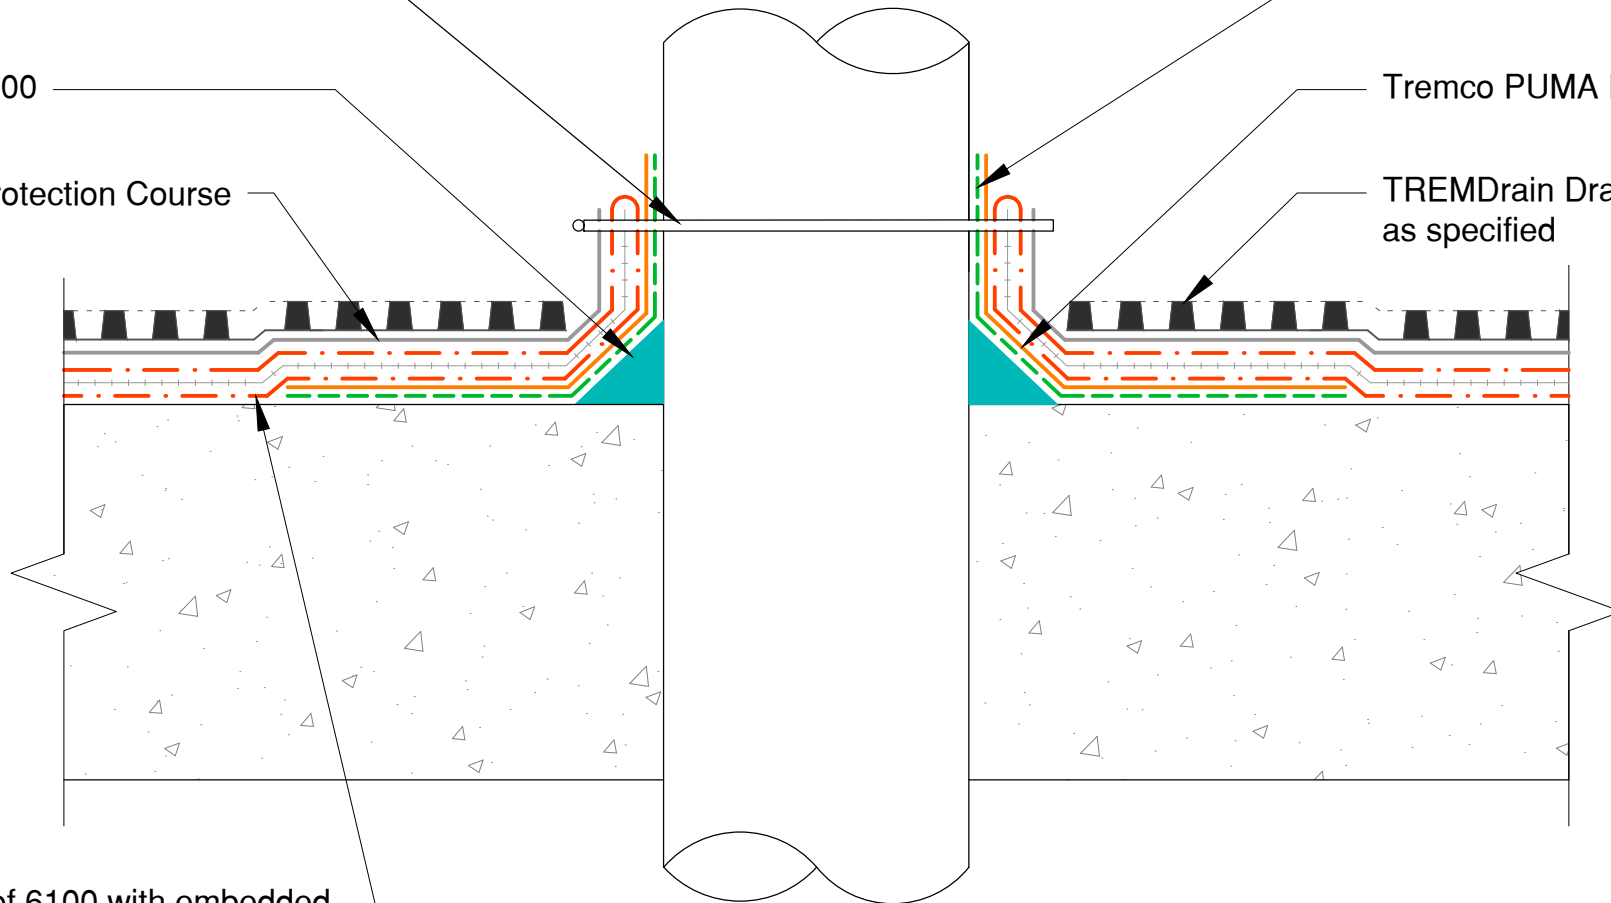

TREMproof 6100 with embedded
reinforcing fabric as specified

Note: TREMprime QD or Tremco approved primer must
be applied before the application of TREMproof 6100

TREMCO

www.tremcosealants.com

3735 Green Road * Beachwood, OH 44122
Phone : 866-209-2404 * Fax: 216-766-5535

Project:

Detail: TREMproof 6100 at Penetration with Tremco PUMA Flashing - Option 2

Sheet Number:

File Name:

H-P-03

This detail is intended for conceptual purposes only.

Drawn by: KAB

Checked by: WH

Scale: None

Date: 8/1/2018